



- Amber light indicates position of lower boom near 80%
- Red light indicates lower boom too low (close to truck)